

Programmed Settings

DIAL SETTING	MIX TIME (seconds)	DESCRIPTION (refer to speed dial)	SUGGESTED APPLICATIONS
A	8	Low (10) for 2 seconds, medium-high (55) for 2 seconds, low for 2 seconds, medium-high (55) for 2 seconds	Soft, frozen dessert with whole mix-in pieces
B	20	Medium (35) for 20 seconds	Soft, frozen dessert with mix-in pieces
C	20	Medium-high (45) for 20 seconds	Soft, frozen dessert with mix-in pieces
D	16	Low (10) for 2 seconds, medium (35) for 10 seconds, medium-high (55) for 4 seconds	Frozen dessert syrups
E	16	High (100) for 6 seconds, medium (35) for 5 seconds, low (10) for 5 seconds	Frozen dessert syrups requiring longer blend times
F	20	Medium (35) for 20 seconds	Soft, frozen dessert with syrups and mix-in pieces
G	14	Low (10) for 2 seconds, medium-high (55) for 12 seconds	Hard, frozen dessert with whole mix-in pieces
H	16	Low (10) for 10 seconds, medium-high (55) for 6 seconds	Hard, frozen dessert with broken mix-in pieces
Foot Pedal*/ Manual	120	Operator controls motor speed and end time	Various

*Foot pedal available on select models only.

